

JVC

Portable Bluetooth Speaker

XS-N328BA / XS-N328WA




User Manual

Important Safety Instructions:

1. Read these instructions thoroughly and retain for future reference.
2. Follow all instructions.
3. Do not expose this speaker to water, corrosive liquids or gases. Store the speaker in a clean, dry place.
4. Do not use the speaker near windows, or near heat sources like radiators, gas stoves or other apparatus that produce heat.
5. Do not place any naked flame sources such as lit candles on or near the speaker.
6. Clean only with a soft, dry cloth.
7. Do not expose the speaker to rain or moisture.
8. Do not cover the speaker during use.
9. No user-serviceable parts inside. Do not open.
10. This product is not a toy! Keep away from children.

Overview

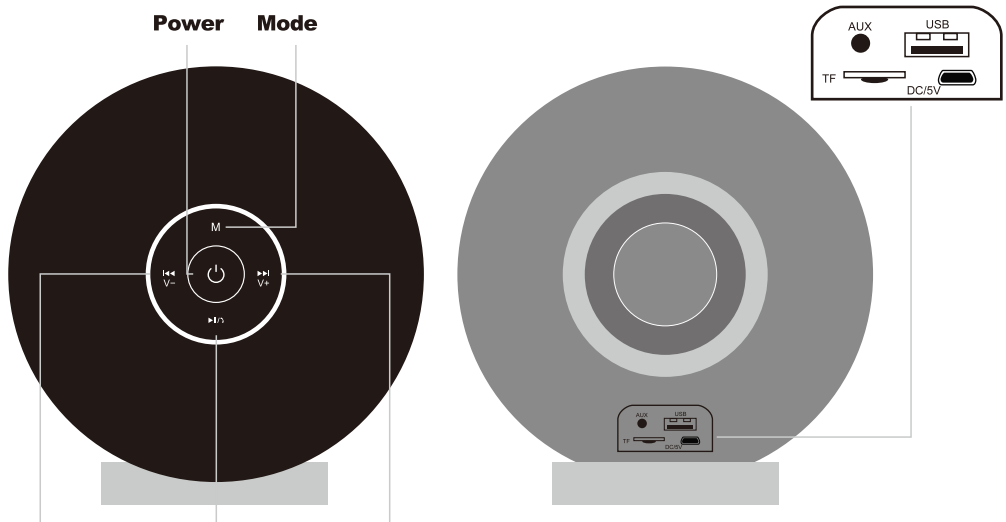

Pre / V- Play/Pause/Call Next/V+

Power button: Press and hold to power on/off the device.

Mode button: Touch and release to switch mode between Bluetooth - AUX.IN - Micro SD - USB.

Pre/v- button: Touch and release it to go to previous song; touch and hold this button to decrease volume.

Next/v+ button: Touch and release it to go to next song; touch and hold this button to increase volume.

Play/Pause/Call button: Play/pause music, and pick up/ end / reject phone calls.

AUX IN: AUX input.

USB: USB input.

TF: MicroSD card input.

DC/5V: MicroUSB charging port for charging the battery.

Charging the Battery

- Before using, fully charge the battery using the supplied USB cable. Plug into any USB port supplying power (Laptop, Computer, AC Charger, Car Charger, etc.).
- A solid red LED indicates that the speaker is charging, it will turn off when fully charged.

Power on/off

- Press and hold the Power button to power on/off the unit.

Bluetooth Pairing

- With the speaker power on, the Bluetooth Speaker goes into Bluetooth Mode when there are no external devices such as microSD cards or USB memory devices. The blue LED flashes indicating that the device is in Bluetooth mode. If there are external devices, touch M button repeatedly until Bluetooth mode is selected.
- Open the Bluetooth settings of your phone, tablet or other Bluetooth enabled audio device and select "XS-N328". When prompted for the pairing code, enter 0000.
- Once paired, solid blue LED light will be on.

Playing Music via Bluetooth

- Select desired song or playlist on your phone, tablet or other Bluetooth enabled audio device.
- Touch and release the play/pause button to start or pause the music.
- Touch and release the " Pre / V-" and "Next /V+" button to go to the previous or next song.
- Touch and hold the " Pre / V-" and "Next /V+" button to adjust volume.

Hands-free Phone Calls

- Touch and release the Play/Pause /Call Button to pick up a call OR to end a call.
- Touch and hold the Play/Pause/Call Button to reject a call, when a new call comes in.

Using the AUX.IN / Micro SD / USB Inputs

- When a USB/microSD card is inserted into the correct port and the speaker is powered on, it directly starts playing compatible music files.
- Touch and release the Mode Button to switch between the different inputs - Bluetooth/AUX/MicroSD/USB.
- Playable Format: MP3. Max size of USB device/MicroSD card that can be connected: 32GB.

Warning: In order to avoid mechanical stress on the connected charging cable and/or USB drive, ensure that only Slim USB devices are connected whilst the charging cable is connected.

LED Indicator	Status of the speaker
Red LED light on	Battery is charging
Red LED light off while charging	Battery is full
Flashing blue LED light	Waiting for Bluetooth pairing
Solid blue LED light	Bluetooth device paired

Specifications

Bluetooth protocol	V4.1
Online distance of Bluetooth	10m (approximate)
Power sources	7.4V 2000mAh lithium rechargeable battery
Battery run time	10 hours (Medium volume)
Charging time	7.5hours
Speaker output	2x9W
Dimensions	21.8x8.3x21.2cm

Package Contents:

- 1 speaker unit in the indicated colour
- Micro USB charging cable
- 3.5mm AUX cable
- This user manual

JVC