

# QUICK START GUIDE

MODEL:LT-40N5105A

# JVC

## 1 PARTS LIST


In the box you will find:

- 1 x 40" Full HD TV
- 2 x Base Stands
- 4 x Screws
- 1 x Remote Control
- 2 x AAA Batteries
- 1 x Instruction Manual
- 1 x Quick Start Guide
- 1 x Warranty Card




## 2 CONNECTIONS

1. LAN
2. AUDIO OUTPUT
3. HDMI IN 1/2/3
4. ANTENNA INPUT
5. DIGITAL AUDIO OUTPUT(OPTICAL)
6. 2 x USB ports
7. AV INPUT

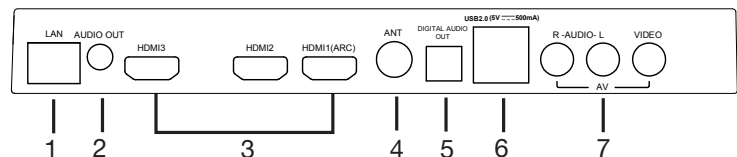

## 3 INSTALLATION

### AND POWER CONNECTION

- 1 Spread a soft towel on a flat surface and lay the TV face down on the towel to avoid scratches.
- 2 Align the Base Stands with the screw holes on the bottom of the TV. Insert and tighten the Screws to attach the Base Stands to the TV.
- 3 Insert batteries into the remote control.
- 4 Connect the antenna cable to the ANTENNA socket of the TV.
- 5 Connect the power plug to the mains power socket.
- 6 Press the  button on the remote control to turn the TV on. The Red standby light will turn off and the TV screen will display the initial setup.

## 4 EASY SET UP SCREEN

The On-Screen Display (OSD) gives you easy instructions for setting up the unit.

Press OK or ► on your remote control to confirm your settings and move to the next step of the setup.

On the final step, the TV will automatically tune all the available digital channels.

## 5 QUICK PICTURE AND SOUND SETTINGS

### **Picture**

You can adjust the picture to your liking by going to Menu > Picture > Picture Mode and selecting one of the preset styles.

You can further adjust Contrast, Brightness, Colour Saturation and Sharpness for the picture by changing the picture mode to Personal.

### **Sound**

You can adjust the sound to your liking by going to Menu > Sound > Sound Mode and selecting one of the preset styles.

You can further adjust the Bass and Treble settings by changing the Sound Mode to Personal.

For detailed instructions, please refer to your user manual.