

JVC

BLUETOOTH TROLLEY SPEAKER XS-N319PBA



USER MANUAL


IMPORTANT SAFETY INSTRUCTIONS

1. Read all instructions before use. Retain for future use.
2. No user-serviceable parts inside. Do not dismantle.
3. Do not immerse the unit in water or other liquids. Do not use in very humid or dusty environments.
4. Do not expose to direct sunlight, heat or fire.
5. Keep the unit away from flammable materials.
6. Do not cover the speaker during use.
7. Use a soft cloth with a small amount of diluted detergent for cleaning. Do not use harsh chemicals or abrasives.
8. Do not dispose of batteries in your household waste. Contact your local council for information on disposal or recycling.
9. This product is not a toy. Children should be supervised to ensure that they do not play with the unit.

CONTENTS OF BOX

- 1x speaker unit
- 1x adaptor
- 1x wireless microphone
- 1x user manual
- 1x warranty card

PANEL DESCRIPTION

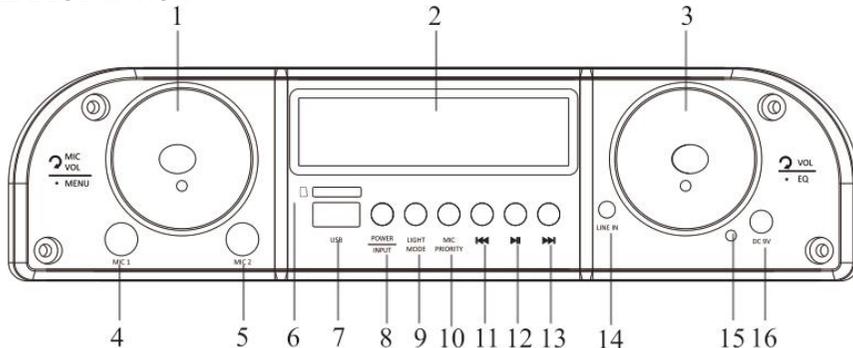

1. MIC Volume/Menu: Rotate the dial to adjust microphone volume. Push the dial to enter the menu and adjust microphone bass (1b) and treble (1t).
2. LED Display.
3. Volume/EQ: Rotate the dial to adjust music volume. Press the dial to adjust the EQ settings. Options include BA, TR and EQ mode settings (JAZZ/POP/CLASSIC/ROCK/G-EQ).
4. MIC1: Microphone Input 1.
5. MIC2: Microphone Input 2.
6. microSD Card Input.
7. USB: USB Player/Power Bank DC 5V,1A Output.
8. POWER/INPUT: Press to switch the unit on/Press to switch between the various inputs(USB/MICROSD/LINE IN/BLUETOOTH/FM). Press and hold to switch the unit off.

9. LIGHT/MODE: Press repeatedly to turn on the LED lights and to switch between the different light modes. Press again to turn off the lights.
10. MIC PRIORITY Microphone priority on/off button,When turned on, the voice input from the microphone will be louder than the background music.
11. Previous Song.
12. Play/Pause/FM: Press to pause a song, press again to resume playback. Press and hold for 3 seconds to enter automatic scan mode to search for the FM stations.
13. Next Song.
14. LINE IN: Auxiliary input
15. LED CHARGE STATUS: RED = Charging; GREEN = Fully Charged.
16. DC 9V Input. Charging Port - connect the adaptor cable here for charging the speaker.

BASIC OPERATION

1. POWER/INPUT: Press and hold for about 2 seconds to turn the unit on. In playback mode, press to select one of the following modes:BT/LINE/FM/USB/microSD. In playback mode, press and hold for about 2 seconds to switch the unit off.
2. PLAY/PAUSE: In playback mode, press to pause play; press again to continue playback. In FM mode, press and hold to automatically scan the radio stations.
3. MIC Volume/Menu: Rotate the dial to adjust microphone volume. Push the dial to enter the menu and adjust microphone bass (1b) and treble (1t).
4. PREVIOUS/NEXT: In Playback mode, press to go back to the previous song or skip to go to the next song.
5. Volume/EQ: Rotate the dial to adjust music volume. Press the dial to adjust the EQ settings. Options include BA, TR and EQ mode settings (JAZZ/POP/CLASSIC/ROCK/G-EQ)
6. USB: USB Player/Power Bank DC 5V,1A output.

FM Operation

Press Power/Input button to switch to FM mode. Press and hold PLAY/PAUSE button to automatically scan the radio stations. Press PREVIOUS or NEXT to select the previous or next station.

Bluetooth

Press the POWER/INPUT button on the panel control to select Bluetooth mode. Simultaneously open the Bluetooth setting on your phone, tablet or any other Bluetooth enabled audio device and select "XS-N319". The unit and device will then connect via Bluetooth.

Auxiliary (LINE IN) mode

- A. Connect one end of a 3.5mm auxiliary cable to the LINE IN port on the unit; connect the other end to an auxiliary device like an mp3 player.
- B. Press the POWER/INPUT button on the front panel to select 'LINE' mode. Now you can use the controls on the connected device to select and play the audio.

USB/microSD mode

- A. Insert a suitable USB/microSD memory device to the respective port on the unit.
- B. Press the POWER/INPUT button on the front panel to select 'USB' or 'TF' mode. Maximum size of USB/microSD device that can be connected: 32GB

File formats playable: MP3,WAV,WMA

Note: The USB port also works as a DC 5V, 1A output suitable for charging mobile devices.

Microphone Input

A wireless microphone is included with the speaker. Simply switch on the microphone and it will connect to the speaker automatically.

There are also 2 microphone inputs where you can connect wired microphones.

Charging the Speaker

This speaker has a built-in rechargeable battery. There is a battery icon on the LED Display that shows the level of battery charge. Charge the speaker promptly when battery is low.

To charge the speaker:

1. Connect the adaptor cable to the DC 9V Charging Input on the front panel.
2. Plug in the adaptor to a suitable mains outlet and turn on. The indicator light on the front of the unit lights up red during charging and turns to green when fully charged. Turn off at the outlet and remove the adaptor cable. Do not overcharge.

App Control

There is a third party app called 'Speaker Pro' that can be used to control the speaker through your smartphone, when connected via Bluetooth. To use this app, first download it on your smartphone (iOS or Android) from the app store. Once downloaded, you can use the app to control functions like music play, speaker light control, equaliser control and more.

SPECIFICATIONS

Power:	20W
Frequency Response for Main Speaker:	45Hz-20KHz
Power Supply:	DC 9V

The maximum size of USB/microSD device that can be connected is 32GB.

Register your product at jyctv.com.au/warranty-registration.