

JVC

Bluetooth Speaker

XS-N3111PBA

Performance Parameters

| Product Specification | |
|---------------------------------|----------------------------------|
| Speaker | 8"X1+Tweeter 1" |
| Bluetooth Version | 5.0 |
| Impedance(Ω) \pm 20% | 4 Ω |
| Output Power | 16W |
| Battery Capacity | 3600mAh,3.7V |
| Main Channel Frequency Response | 40Hz~20KHz |
| SNR | >75dB(AFR) |
| Power Input | DC5V,1A |
| Radio FM | 87-108MHz |
| Input Signal Source | AUX Terminal,Bluetooth,USB,TF,FM |
| Distortion | \leq 1% |
| Separation | \geq 40dB |
| Dynamic Range | \geq 90dB |

JVC



User Manual

Charging the Speaker

Turn off the unit before charging. Charge the unit fully before using it for the first time and whenever the sound becomes weak.

1. Connect the USB charging cable to the microUSB Charging Port on the unit.
Connect the other end of the charging cable to a DC 5V, 1A power adaptor to charge the unit. You can also connect it to the USB port of a computer or similar.
2. The red Charging Indicator turns on when the unit is charging and turns off when it is fully charged. Remove the charging cable promptly. Do not overcharge.
3. It takes about 8 hours to charge the battery fully.
Battery run time: Around 3 hours.

Bluetooth Connection

- Place the speaker close to (within 10 metres of) your Bluetooth enabled device.
- Press Mode Button to switch to Bluetooth mode.
- Enable Bluetooth function on your Bluetooth-enabled smartphone, Tablet or media player; navigate to the Bluetooth setting menu, and search for new devices.
- The Bluetooth name for this speaker is 'XS-N3111'.
- Once connected, you can short press Previous or Next Button to play the previous or next song.

FM Radio Playback

- Press the Mode Button to switch to FM Radio mode.
- Press the Play/Pause Button to search for available FM channels automatically.
Once the search is complete, the speaker will store the channels automatically.
- To stop automatic search, press the Play/Pause Button again.
- Press the Previous or Next Buttons to switch between the channels.

USB/microSD/AUX Input

Connect a USB/microSD memory device, or an AUX cable connected to your device, to the appropriate port. Use the 'Mode' Button to switch to the correct mode.

Note:

- Only MP3 or WAV formats are compatible.
- Maximum size of the USB/ microSD device that can be connected is 32GB.

Microphone Input

- Connect a microphone to the Microphone Input on the top of the unit.
- Use the Mic Vol and Echo Dials to adjust the echo and volume settings.

True Wireless Stereo (TWS) Mode

(Optional, requires two speakers)

If you have two speakers (Model: XS-N3111PBA), you can use them together for a more immersive Audio experience.

1. Place the two speakers in the same room and turn them on.
2. Press the Mode Button on both speakers to switch the speakers to Bluetooth mode.
3. Do not connect either speaker to your audio source device at this stage.
4. Press and hold the TWS Button on either speaker to connect the two speakers in TWS mode. you will hear an audio alert indicating that the two speakers are connected.
5. Now enable Bluetooth function on your Bluetooth-enabled smartphone, tablet or media player; navigate to the Bluetooth setting menu, and search for new devices.
The Bluetooth name for this speaker is 'XS-N3111'.
6. Once connected, you can play Bluetooth audio from your source device on the speakers wirelessly, in stereo.

Important Safety Instructions




- Warning:** To prevent fire or shock hazard, do not expose the unit to rain or moisture. to avoid electrical shock, do not dismantle. Refer all servicing to qualified service personnel.
1. Read these instructions thoroughly and retain for future reference.
 2. When using electrical appliances, basic safety precautions should always be followed.
 3. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
 4. This product is not a toy! Children should be supervised to ensure that they do not play with the appliance.
 5. Any repairs must be done by qualified service personnel. There are no user-serviceable parts inside. Do not attempt to repair by yourself.
 6. Do not expose this speaker to water, corrosive liquids or gases. Store the speaker in a clean, dry place.
 7. For indoor use only. Keep the unit free from dust and away from heat sources, direct sunlight, humidity, water or other liquids.
 8. Do not immerse the unit in water or other liquids.
 9. Do not place any naked flame sources such as lit candles on or near the speaker.
 10. Clean only with a soft, dry cloth.
 11. Place the unit on a flat, stable surface. Do not cover the speaker during use.
 12. Do not operate the unit if it has been exposed to water, moisture or any other liquid in order to prevent electric shock, explosion and/or injury to yourself and damage to the unit.
 13. Do not use the unit for anything other than its intended use.
 14. Do not play music at excessive volume levels as this can cause hearing loss or damage the unit.

PACKING LIST

- | | |
|-----------------------------|-----|
| 1. Speaker | 1pc |
| 2. User Manual..... | 1pc |
| 3. Aux In Cable | 1pc |
| 4. Wired Microphone | 1pc |
| 5. USB Charging Cable | 1pc |



PRODUCT OVERVIEW

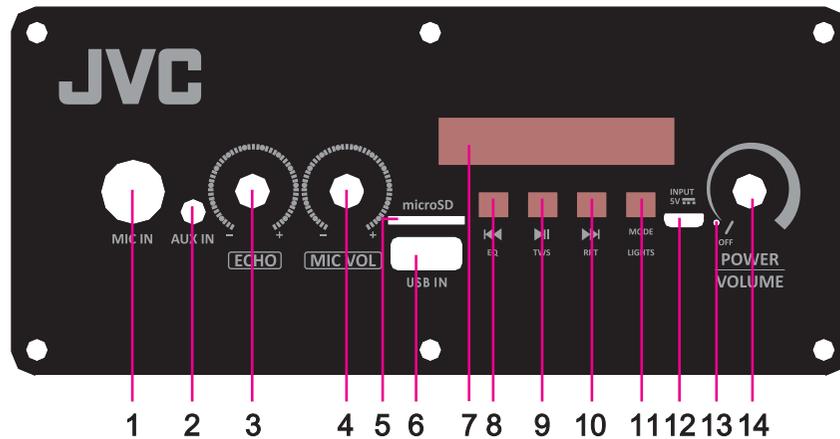

1. Microphone input jack
2. Aux In input jack(3.5mm audio input)
3. Microphone Echo control
4. Microphone volume control
5. microSD (TF) card input slot
6. USB device input slot(USB 2.0,Max 32GB)
7. LED display

8. Previous Song (Previous Station) or EQ:
Short press to go to the previous song (or previous station in FM mode).
Press and hold to choose equaliser mode (POP/ROC/JAZ/CLR/NOR).
9. Music Play/Pause or TWS:
Short press to play a song or to pause play. In FM mode, short press to search available FM stations. In Bluetooth mode, press and hold to make TWS connection (see TWS section for details).
10. Next song/ Next station or RPT:
Short press to go to the next song (or next station in FM mode).
In USB/microSD mode, press and hold to repeat one song, all songs or turn off repeat.
11. Mode/Lights:
Short press to switch between the available modes: BT/FM/USB/TF/AUX.
Press and hold to turn on or turn off the LED lights.
12. microUSB Charging Port:
DC 5V, 1A socket for charging the speaker.
13. Charging Indicator LED:
LED remains on during charging and turns off when battery is charged fully.
14. Power Switch/Volume Control:
The speaker is off when the dial is turned fully to the left. Turn the dial to the right until it 'clicks' to turn on, turn it to the left end to turn off.
Adjust the dial to the right or left to increase or decrease the volume.