

JVC

Portable Bluetooth Speaker

XS-N3212PBA



 Bluetooth®

Contents of box:


- 1x Speaker unit
- 1x microUSB charging cable
- 1x wired microphone
- 1x instruction manual

Important Safety Instructions:

Please read all instructions carefully and retain for future reference. When using the unit, basic safety precautions should always be followed, including the following:

1. Keep this product and its charging cable away from direct sunlight, water, excessive heat or flammable materials.
2. Do not use in humid or dusty environments. Objects containing liquids, such as vases, should not be placed on the device.
3. Do not operate this product if it has malfunctioned or has been damaged in any way.
4. No user-serviceable parts inside. Do not dismantle.
5. This product is not a toy. Children should be supervised to ensure that they do not play with the appliance.
6. Do not expose batteries to heat or fire as they may explode.
7. Do not dispose of batteries in your household waste. Contact your local council for information on disposal or recycling.
7. Do not immerse the unit in water or other liquids. Store in a cool, dry place.
8. Clean only with a soft, dry cloth. Do not use harsh or abrasive cleaning products as this may cause damage.
9. Place the unit on a flat, stable surface. Do not cover the speaker during use.
10. Do not insert foreign objects into any opening on the unit.
11. Do not play music at excessive volume levels as this can cause hearing loss or damage the unit.

Overview:

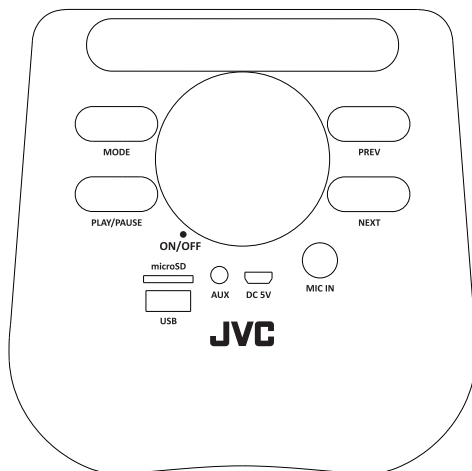

1. Mode Button: Short press to switch between available modes: BT / AUX / FM / USB / microSD. Long press to turn on/off speaker lights.
2. Play/Pause Button: Short press to play or pause the song in Bluetooth/USB/microSD modes.
In FM mode, short press to scan available FM stations and store into memory. Short press two times in quick succession for TWS function in Bluetooth mode (optional, requires two speakers). Long press for Bluetooth disconnect.
3. On/Off/Volume Dial:
Rotate the dial to the right (past the initial 'click') to turn on the speaker.
Rotate the dial left or right to adjust volume.
Rotate fully to the left to turn off the speaker.
4. Previous Button: Short press to play the previous song (or previous channel in FM mode).
5. Next Button: Short press to play the next song (or next channel in FM mode).
6. MicroSD (TF) card port: Insert microSD card to play compatible audio.
7. USB port: Insert USB memory device to play compatible audio.
8. AUX Input: Connect auxiliary device using 3.5mm AUX cable to play audio.
9. DC 5V: microUSB Charging Port to charge the speaker.
10. MIC IN: 6.35mm input to connect wired microphone.

Charging the Speaker:

Turn off the unit before charging. Charge the unit fully before using it for the first time and whenever the sound becomes weak.

1. Connect the USB charging cable to the DC5V microUSB Charging Port on the unit. Connect the other end of the charging cable to a DC 5V, 1A power adaptor to charge the unit. You can also connect it to the USB port of a computer or similar.
2. The red Charging Indicator turns on when the unit is charging and turns green when it is fully charged. Remove the charging cable promptly. Do not overcharge.
Charging time: Around 5 hours.
Battery run time: Around 2 hours.

Bluetooth Connection:

- Place the speaker close to (within 10 metres of) your Bluetooth enabled device.
- If not in Bluetooth mode, press Mode Button repeatedly to switch to Bluetooth mode.
- Enable Bluetooth function on your Bluetooth-enabled smartphone, tablet or media player; navigate to the Bluetooth setting menu, and search for new devices. The Bluetooth name for this speaker is 'XS-N3212'.
- Once connected, you can short press Previous or Next Button to play the previous or next song.

FM Radio Playback:

- Press the Mode Button repeatedly to switch to FM Radio mode.
- Short press the Play/Pause Button to search for available FM channels automatically. Once the search is complete, the speaker will store the channels automatically.
- To stop automatic search, press the Play/Pause Button again.
- Press the Previous or Next Buttons to switch between the channels.

USB/microSD/AUX Input:

Connect a USB/microSD memory device, or an AUX cable connected to your device, to the appropriate port. Press the Mode Button repeatedly to switch to the correct mode.

Note:

- Only MP3 format is compatible.
- Maximum size of the USB/ microSD device that can be connected is 32GB.

True Wireless Stereo (TWS) Mode

(Optional, requires two speakers)

If you have two speakers (Model: XS-N3212PBA), you can use them together for a more immersive audio experience.

1. Place the two speakers in the same room and turn them on.
2. Press the Mode Button on both speakers to switch the speakers to Bluetooth mode. Do not connect either speaker to your audio source device at this stage.
3. Short press the Play/Pause Button (on either speaker) two times in quick succession to connect the two speakers in TWS mode. You will hear an audio alert indicating that the two speakers are connected.
4. Now enable Bluetooth function on your Bluetooth-enabled smartphone, tablet or media player; navigate to the Bluetooth setting menu, and search for new devices. The Bluetooth name for this speaker is 'XS-N3212'.
5. Once connected, you can play Bluetooth audio from your source device on the speakers wirelessly, in stereo.

Specifications:

- Output Power: 6W x 2
- Speakers: 2 x 5.25"
- Battery: Built-in rechargeable 2400mAh battery
- Frequency Response: 150Hz-15KHz
- Signal to noise ratio \geq 70dB
- Playing Time: up to 2 hours
- Power supply: DC5V 1A (use the included microUSB charging cable to charge the built-in battery)
- Unit size: 195*198*395MM

Troubleshooting

Problem	Possible cause/ Solution
Speaker turns off when volume is decreased	If you turn the Volume Dial fully to the left, the speaker will turn off. To lower volume, turn the dial to the left (only until the off position).
Cannot play file from USB/microSD	File might be in an incompatible format. Only mp3 audio files can be played. File path might not be recognized; try storing the file directly in the root directory.
No sound	Try increasing the volume. Choose the correct audio source. If connected to a computer, make sure correct audio output is selected.
Buttons are not working	Battery might be low. Try charging for a few hours. Turn it off and turn on again after a few seconds.

JVC

Register your product at [jvctv.com.au/warranty-registration](https://www.jvctv.com.au/warranty-registration)